




Adapter RS Type

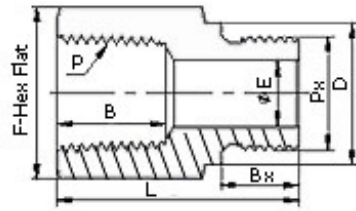

Adapter RS Type

P-NPT Size (in.)	Px-RS Size (in.)	Basic Ordering Number	L	F	B	Bx	E Minimum Opening	D
1/8	1/8	A-NS2-RS2	25.1	14.3	9.9	7.1	4.1	13.7
1/4	1/4	A-NS4-RS4	33.5	19.1	10.4	11.2	5.8	18.0
3/8	3/8	A-NS6-RS6	35.8	22.2	15.0	11.2	7.9	21.6
1/2	1/2	A-NS8-RS8	44.2	27.0	15.0	14.2	11.9	25.9
3/4	3/4	A-NS12-RS12	48.0	33.3	20.6	15.7	15.7	32.0
1	1	A-NS16-RS16	53.3	41.3	25.4	18.3	19.8	38.9

Fluid Fit Engineers

Unit 11, Pereira Compound, Near Vaishali Nager, S. V. Road

Mumbai-400 102, Maharashtra (India)